



X1-MINI G4

0.6 kW / 0.7 kW / 0.8 kW / 1.1 kW / 1.5 kW / 2.0 kW / 2.5 kW / 3.0 kW / 3.3 kW / 3.7 kW/ 4.0 kW

Installation Manual

Version 1.0

www.solaxpower.com



Safety

General Notice

- 1. Contents may be periodically updated or revised. SolaX reserves the right to make improvements or changes in the product(s) and the program(s) described in this manual without the prior notice.
- 2. The installation, maintenance and grid-related setting can only be performed by qualified personnel who:
 - Are licensed and/or satisfy state and local jurisdiction regulations;
 - Have good knowledge of this manual and other related documents.
- 3. Before installing the device, carefully read, fully understand and strictly follow the detailed instruction of the user manual and other related regulations. SolaX shall not be liable for any consequences caused by the violation of the storage, transportation, installation, and operation regulations specified in this document and the user manual.
- 4. Use insulated tools when installing the device. Individual protective tools must be worn during installation, electrical connection and maintenance.
- 5. Please visit the website www.solaxpower.com of SolaX for more information.

Descriptions of Labels



Note: The table is only used for the description of symbols which may be used on the inverter. Please be subject to the actual symbols on the device.



Lethal danger from electrical shock due to the inverter

- Only operate the inverter when it is technically faultless. Otherwise, electric shock or fire may occur.
- Do not open the enclosure in any case without authorization from SolaX. Unauthorized opening will void the warranty and cause lethal danger or serious injury due to electric shock.

! DANGER!

Lethal danger from electrical shock due to the PV

- When exposed to sunlight, high DC voltage will be generated by PV modules. Death or lethal injuries will occur due to electric shock.
- Never touch the positive or negative pole of PV connecting device. Touching both of them at the same time is prohibited as well.
- Do not ground the positive or negative pole of the PV modules.
- Only qualified personnel can perform the wiring of the PV panels.

MARNING!

Risk of personnel injury or inverter damage

- During operation, do not touch any parts other than DC switch and LCD panel.
- Never connect or disconnect the AC and DC connectors when the inverter is running.
- Turn off the AC and DC power and disconnect them from the inverter, wait for 5 minutes to fully discharge the voltage before attempting any maintenance, cleaning or working on any circuits connected.
- Make sure that the input DC voltage ≤ Maximum DC input voltage of the inverter.
 Overvoltage may cause permanent damage to the inverter, which is NOT covered by the warranty.


! CAUTION!


- Keep children away from the inverter.
- Pay attention to the weight of the inverter. Personal injuries may be caused if not handled properly.

NOTICE!

- The inverter has an integrated Type-B Residual Current Monitoring Unit (RCMU).
- If an external RCD is required by local regulations, check which type of RCD is required for relevant electric codes. It is recommended to use a Type-A RCD with the value of 300 mA.
- All the product labels and nameplate on the inverter shall be maintained clearly visible.

Packing List

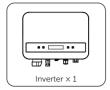

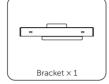
















*Refer to the actual delivery for the optional accessories.

Near combustibles

Installation Site

Avoid snow lay up

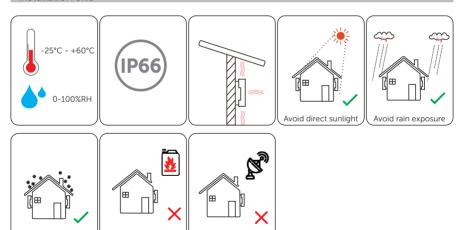


NOTICE


Near antenna

- For outdoor-installation, precautions against direct sunlight, rain exposure and snow accumulation are recommended.
- Exposure to direct sunlight raises the temperature inside the device. This temperature rise poses no safety risks, but may impact the device-performance.


Installation Carrier

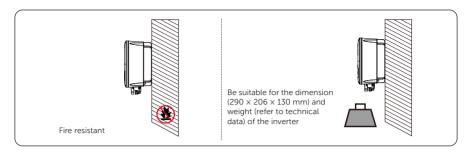


Installation Angle

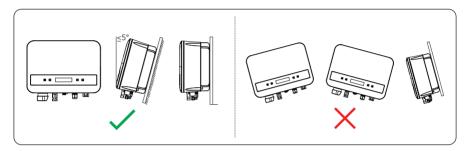

Installation Space

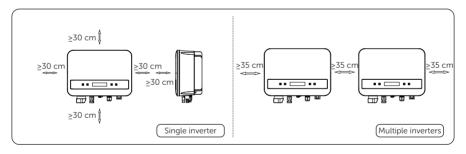

Terminal Description

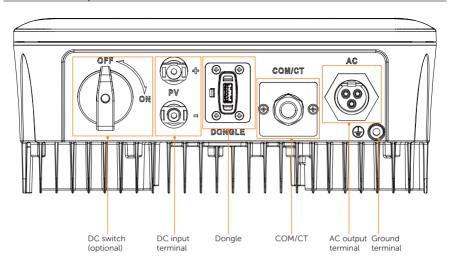


Installation Tools







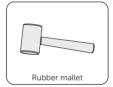


















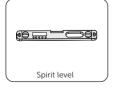
















Additionally	Required	Materials

No.	Required Material	Type	Size		
1	AC circuit breaker	/	/		
2	PV cable	Dedicated PV wire withstand voltage 600 V	Cross sectional area: 4~6 mm²		
3	AC cable	Three-core copper wire	Cross sectional area: 2.5~6 mm ² (0.6 K-3.3 K); 3~6 mm ² (3.7 K-4.0 K)		
4	Communication cable	Network cable CAT5	External diameter: Ø2-6 mm		
5	PE cable	Conventional yellow and green wire	Cross sectional area: 2.5~6 mm ² (0.6 K-3.3 K); 3~6 mm ² (3.7 K-4.0 K) * The cross-sectional area of PE line should be the same as that of L/N line.		


Mechanical Installation

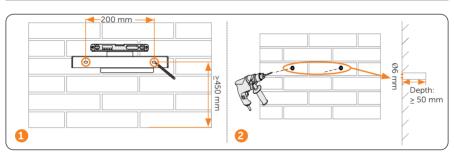


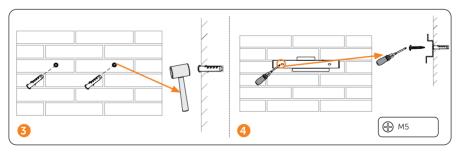

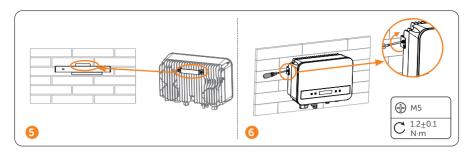



PE Connection

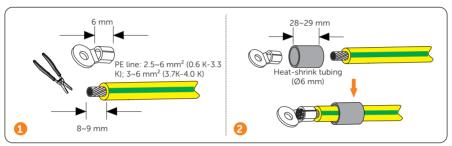


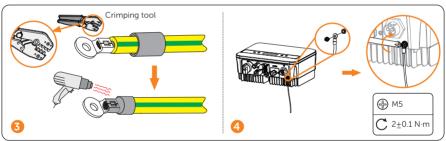



AC Side Connection

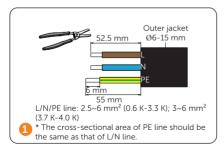


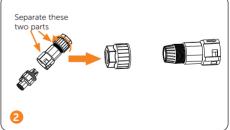


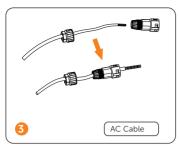

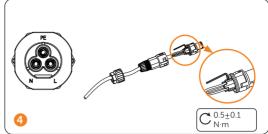


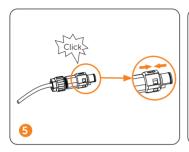


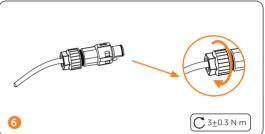


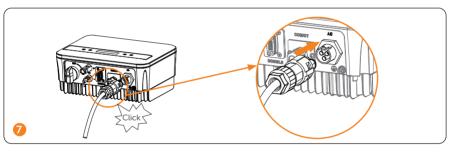



DC Side Connection

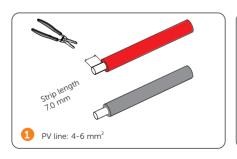


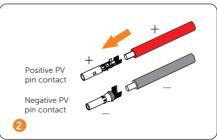


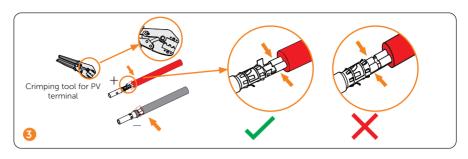


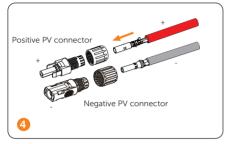

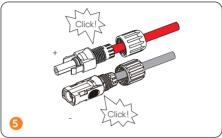


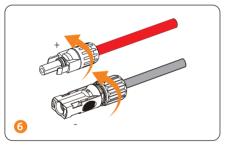


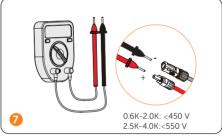


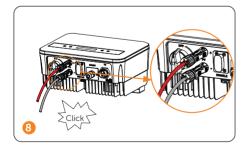



Communication Connection

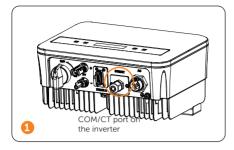


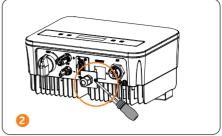


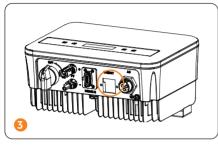


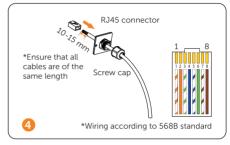

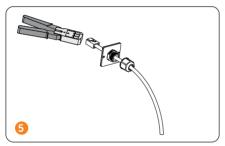

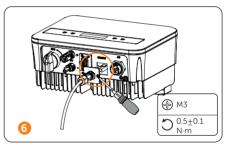

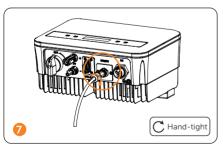

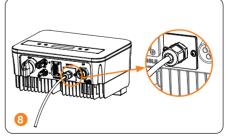


• Pin definition.

Function	СТ	DRM	Heat pump	RS485/ Meter	RS485/ Meter	Heat pump	DRM	СТ
Pin	1	2	3	4	5	6	7	8
Pin Definition	CT+	DRM0	Heat Pump-	485_A	485_B	Heat Pump+	+3.3V	CT-


^{*}Note: DRM0 here is for AS4777.2 AU/NZ.

For RS485.

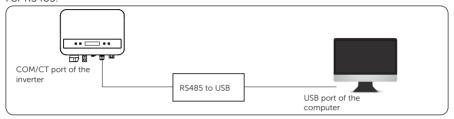


• For meter.

i. For meter with CT

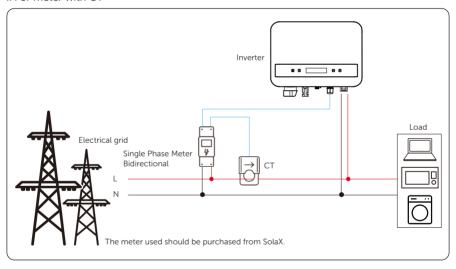


ii. For meter without CT

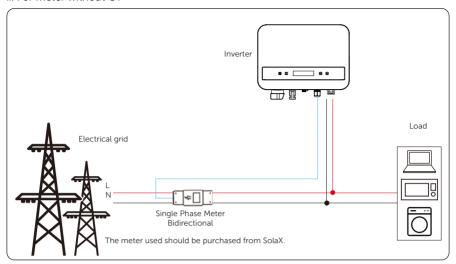

iii. For wireless meter


• For direct CT connection.

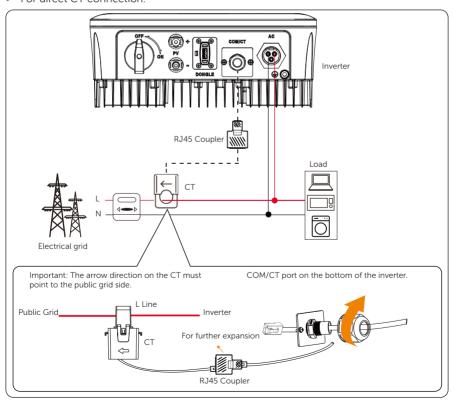


Power on the System

Step 1: Turn on DC switch.


i) Turn on the DC switch from OFF state to ON state.

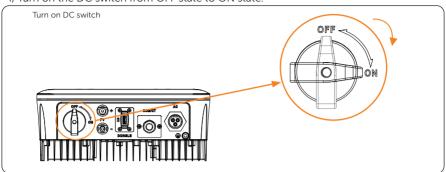

Step 2: Turn on AC breaker.

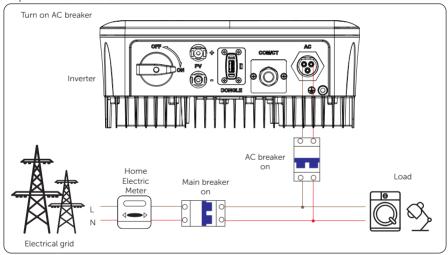

LCD Panel

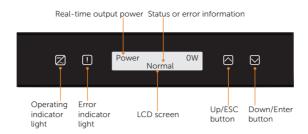

- In normal status, the "Power"/"Pgrid"/"Today"/"Total" information will be displayed respectively. You can press the keys to switch information.
- In error status, the fault message and error code will be displayed, please refer to corresponding solutions in the user manual.

Item	Description
LCD screen	Display the information of the inverter.
Operating indicator light	Light in blue: The inverter is in normal status. Flash in blue: The inverter is in waiting status.
Error indicator light	Light in red: The inverter is in fault status.
Up/ESC button	Up/ESC button: Short press to move cursor up or increase value;
	Long press to return from current interface or function.
Down/Enter button	Down/Enter button: Short press to move the cursor down or decrease value. Long press to confirm or change the parameters.

General Setting







*The default password is 2014 for the installer, which only allows the installer to review and modify necessary settings complying to the local rules and regulations. If further advanced setting is required, please contact the distributor or us for assistance.

Technical Data

• DC input

Model	X1-MINI- 0.6K-G4	X1-MINI- 0.7K-G4	X1-MINI- 0.8K-G4	X1-MINI- 1.1K-G4	X1-MINI- 1.5K-G4
Max. PV array input power [Wp]	1200	1400	1600	2200	3000
Max. PV voltage [d.c.V]	450	450	450	450	450
Startup voltage [d.c.V]	50	50	50	50	50
Nominal input voltage [d.c.V]	360	360	360	360	360
MPPT voltage range [d.c.V]	40-450	40-450	40-450	40-450	40-450
No. of MPP trackers/Strings per MPP tracker			1/1		
Max. PV current [d.c.A]			16		
I _{sc} PV array Short Circuit SC Current [d.c.A]			22		
Max. inverter backfeed current to the array [d.c.A]			0		

Model	X1-MINI-	X1-MINI-	X1-MINI-	X1-MINI-	X1-MINI-	X1-MINI-	
Model	2.0K-G4	2.5K-G4	3.0K-G4	3.3K-G4	3.7K-G4	4.0K-G4	
Max. PV array input power [Wp]	4000	5000	6000	6600	7400	8000	
Max. PV voltage [d.c.V]	450	550	550	550	550	550	
Startup voltage [d.c.V]	50	50	50	50	50	50	
Nominal input voltage [d.c.V]	360	360	360	360	360	360	
MPPT voltage range [d.c.V]	40-450	40-550	40-550	40-550	40-550	40-550	
No. of MPP trackers/Strings per MPP tracker			1	/1			
Max. PV current [d.c.A]		16					
I _{sc} PV array Short Circuit SC Current [d.c.A]			2	2			
Max. inverter backfeed current to the array [d.c.A]		0					

AC output

Model	X1-MINI- 0.6K-G4	X1-MINI- 0.7K-G4	X1-MINI- 0.8K-G4	X1-MINI- 1.1K-G4	X1-MINI- 1.5K-G4
Rated output apparent power [VA]	600	700	800	1100	1500
Nominal AC output current [a.c.A]	2.6	3.1	3.5	4.8	6.5
Max. output apparent power [VA]	600	770	800	1210	1650
Max. output continuous current [a.c.A]	3	3.5	3.7	5.5	7.5
Nominal AC voltage [a.c.V]/ Grid range		22	0/230/240; 90-2	290	

Model	X1-MIN 0.6K-G			L-MINI- .8K-G4	X1-MINI- 1.1K-G4	X1-MINI- 1.5K-G4	
Nominal grid frequency [Hz]	U.OK-G	+ 0.71		.8K-G4 1/60; +5	1.1N-G4	1.5K-G4	
<u> </u>			0.8leading-0.8lagging				
Displacement power factor			U.Bleadii	3 33 3	3		
ITHDi (rated power) [%]				<3			
Current (inrush) [a.c.A]	50						
Maximum output fault current [a.c.	A] 58 (15 ms)						
Maximum output overcurrent protection [a.c.A]				35			
Model	X1-MINI-	X1-MINI-	X1-MINI-	X1-MINI-	X1-MINI-	X1-MINI-	
	2.0K-G4	2.5K-G4	3.0K-G4	3.3K-G4	3.7K-G4	4.0K-G4	
Rated output apparent power [VA]	2000	2500	3000	3300	3700	4000	
Nominal AC output current [a.c.A]	8.7	10.9	13.1	14.4	16.1	17.4	
Max. output apparent power [VA]	2200	2750	3300	3300	4070	4400	
Max. output continuous current [a.c.A]	10	12.5	15	15	18.5	20	
Nominal AC voltage [a.c.V]/ Grid range			220/230/2	40; 90-290			
Nominal grid frequency [Hz]	50/60; +5						
Displacement power factor	0.8leading-0.8lagging						
ITHDi (rated power) [%]	<3						
Current (inrush) [a.c.A]	50						
Maximum output fault current				.5 ms)			

58 (15 ms)

35

• System Data, Protection and Standard

[a.c.A]

Maximum output overcurrent protection [a.c.A]

Model	X1-MINI- 0.6K-G4	X1-MINI- 0.7K-G4	X1-MINI- 0.8K-G4	X1-MINI- 1.1K-G4	X1-MINI- 1.5K-G4		
Max. efficiency [%]	98	98	98	98	98		
Euro. efficiency [%]	96	96	95	97	97		
Standby consumption [W] @Night		<1					
Ingress protection			IP66				
Protective class			1				
Overvoltage category			II (DC), III (AC)				
Operating ambient temperature range [°C]			-25-60				
Max. operation altitude [m]			<4000				
Humidity [%]			0-100				
Typical noise emission [dB]	25	25	25	25	25		
Storage temperature [°C]			-30-70				
Dimensions(W×H×D) [mm]			290x206x130				
Weight [kg]	5.2	5.2	5.2	5.2	5.2		
Cooling concept			Nature cooling				
Communication interfaces		RS485/DRM/USI	B/Heat Pump, Op	otional: CT/Meter	•		
Optional monitoring dongle		P	ocket WiFi/LAN/4	1G			
Over/under voltage protection			YES				
DC isolation protection			YES				
Monitoring ground fault protection			YES				
Grid monitoring			YES				
DC injection monitoring			YES				
Back feed current monitoring	YES						
Residual current detection	YES						
Anti-islanding protection	YES						
Over temperature protection			YES				

Model	X1-MINI- 0.6K-G4			-MINI- 8K-G4	X1-MINI- 1.1K-G4	X1-MINI- 1.5K-G4
SPD (PV/AC)		Тур		(Optional)		
AFCI			0	ptional		
Safety			EN/IEC	C62109-1/2		
EMC		EN61000-	6-1/2/3/4;EN	61000-3-2/3	/11/12;EN55011	
Grid monotoring	IE				4105, CEI 0-21,	VFR
Inverter typology			Non	-isolated		
Active anti-islanding method			Frequ	ency shift		
Micro-breaker				10A		
Model	X1-MINI- 2.0K-G4	X1-MINI- 2.5K-G4	X1-MINI- 3.0K-G4	X1-MINI- 3.3K-G4	X1-MINI- 3.7K-G4	X1-MINI 4.0K-G4
Max. efficiency [%]	98	98	98	98	98	98
Euro. efficiency [%]	97	97	97	97	97	97
Standby consumption [W] @Night		<1				
Ingress protection			IP	66		
Protective class				I		
Overvoltage category			II (DC),	III (AC)		
Operating ambient temperature range [°C]			-25	-60		
Max. operation altitude [m]			<40	000		
Humidity [%]			0-1	100		
Typical noise emission [dB]	25	25	25	25	30	30
Storage temperature [°C]			-30	1-70		
Dimensions(W×H×D) [mm]			290x2	06x130		
Weight [kg]	5.2	5.5	5.5	5.5	5.5	5.5
Cooling concept			Nature	cooling		
Communication interfaces		RS485/DRM	1/USB/Heat P	ump, Option	al: CT/Meter	
Optional monitoring dongle			Pocket Wi	Fi/LAN/4G		
Over/under voltage protection			Y	ES		
DC isolation protection			Y	ES		
Monitoring ground fault protection			Y	ES		
Grid monitoring			Y	ES		
DC injection monitoring			Y	ES		
Back feed current monitoring			Y	ES		
Residual current detection			Y	ES		
Anti-islanding protection			Y	ES		
Over temperature protection			Y	ES		
SPD (PV/AC)			Type II (0	Optional)		
AFCI		Optional				
Safety		EN/IEC62109-1/2				
EMC	EN61000-6-1/2/3/4;EN61000-3-2/3/11/12;EN55011					
Grid monotoring	IEC61727, EN50549, G98, AS 4777.2, VDE4105, CEI 0-21, VFR					
Inverter typology				solated		
Active anti-islanding method				ncy shift		
Micro-breaker	16A	20A	20A	20A	25A	25A

Note:

^{1.} For X1-MINI-3.7K-G4 and X1-MINI-4.0K-G4, internal fan is standard.

Wi-Fi Quick Guide (Optional)

Descriptions of Labels



CE mark of conformity



FCC mark of conformity



RCM mark of conformity



ANATEL certification



Telefication mark of conformity



Do not dispose of the device together with household waste.

- The product conforms to RF specifications and technical standards.
- The device complies with DOC declaration.
- The device meets the basic requirements and other relevant provisions of 2014/53/ FU directive
- The device is allowed to be used in all EU member states.
- Manufacturer: SolaX Power Network Technology (Zhejiang) Co., Ltd. Product type: Pocket WiFi

[CE DECLARATION OF COMFORMITY]: https://www.solaxpower.com/uploads/file/ pocket-wifi-ce-declaration-of-conformity-en.pdf

- This device complies with part 15 of the FCC Rules Operation is subject to the following two conditions:
- (1)This device may not cause harmful interference, and
- (2)This device must accept any interference received, including interference that may cause undesired operation.
- Any changes or modifications not expressly approved by the party responsible forcompliance could void the user's authority to operate the equipment.

FCC RULES

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Packing List




Installation

Installation steps


△WARNING!

• Ensure that all power has been turned off at least 5 minutes prior to installation.

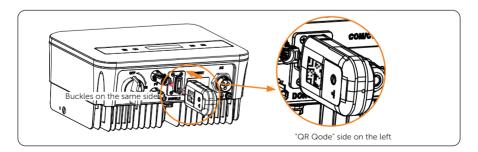

Installation requirements

For Wi-Fi mode, the longest connection distance between the router and the equipment should be no more than 100 meters; if there is a wall between the router and the equipment, the longest connection distance is 20 meters.

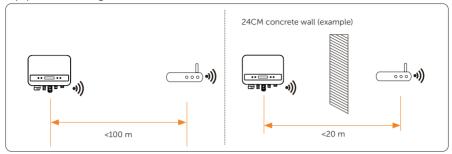

NOTICE

• When the Wi-Fi signal is weak, please install a Wi-Fi signal booster at the appropriate location.

Wi-Fi Configuration

Technical Data

Scan the following QR code or search for the keyword "SolaxCloud" in the APP Store to download the Monitoring APP.

Scan the following QR code to read the Configuration Guide online.



DOWNLOAD APP



CONFIGURATION GUIDE


NOTICE

• If you need to download the **Configuration Guide**, please scroll down to the bottom of the interface and click [Download].

Pocket WiFi V4.0	
5 V 50 mA DC	
0.5 W	
5 mins / 10 s (optional)	
18 dBm (Measured Max. Average)	
0.5 dBi	
	5 V 50 mA DC 0.5 W 5 mins / 10 s (optional) 18 dBm (Measured Max. Average)

WiFi Standard	802.11 b/g/n/ax
WiFi Band	2.412-2.472 GHz
BLE Standard	BLE5.2 1M (aid WiFi connection)
Weight	45±10 g
Dimensions	83 × 44 × 26.5 mm
Protection Degree	IP65
Operating Temperature	-30°C ~ +60°C
Wireless Module	WiFi 6, 2.4 GHz
EMC	ETSI EN 301 489-1 V2.2.3: 2019, ETSI EN 301 489-17 V3.2.4:2020 EN 55032:2015+A11:2020, EN 55035:2017+A11:2020EN IEC61000-3-3: 2019+A1:2021, EN 61000-3-3: 2013/A2: 2021/AC: 2022-01
Safety	EN 62368-1:2014+A11:2017
Radio	ETSI EN 300 328 V2.2.2: 2019
Health	EN IEC 62311: 2020, EN 50665: 2017

Indicator and Key

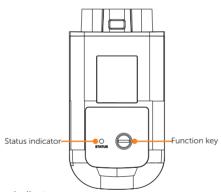

• Description of status indicator

Color	Status	Description
Red	Flash	Inverter connection abnormal
	Always on	Router connection abnormal
Green	Flash	OTA upgrade
	Always on	All connections normal
Red&Green	Flash alternately	Server connection abnormal

• Description of function key

Function	Operation	Description
Turn on AP	Press once	The indicator being in red for 200 ms indicates the operation works.
Restart	Press twice	The indicator being in red for 200 ms twice indicates the operation works.
Factory reset	Long press for more than 5 s	The indicator flashing in red three times indicates the operation works.

NOTICE

- If you need to enter LOCAL MODE, please press the function key once to turn on AP.
- The priority level of status indicator: OTA upgrade > Inverter connection abnormal > Router connection abnormal > Server connection abnormal.

Warranty Registration

Please visit the website: https://www.solaxcloud.com/user-center/ to complete the warranty registration. For more detailed warranty terms, please visit SolaX official website: www.solaxpower.com.



${\bf Sola X\; Power\; Network\; Technology\; (Zhejiang)\; Co.,\; Ltd.}$

ADD.: No. 278, Shizhu Road, Chengnan Sub-district, Tonglu County, Hangzhou, Zhejiang, China

E-mail: info@solaxpower.com